

# Node Remote

For Android & iOS



Easily control your Allstar Node

[www.m0dqw.com](http://www.m0dqw.com)

## Setup Guide

Document Version 1.0

Step 1. Open the file "manager.conf" located in /etc/asterisk on your node

Step 2. Make a note of the following settings within "manager.conf"

- port (default is 5038)
- secret
- The Stanza Name that the secret value is under (normally [ADMIN] but this may have changed this to another username)

Step 3. Change bindaddr to bindaddr = 0.0.0.0;

Step 4. Save "manager.conf"

Step 5. Reboot your node

Step 6. Create a Node Account on Node Remote app and fill in details using the previously noted values

Cancel      Create Account      Save

Node Number

Username

Password

Node IP Address      Port  
      5038

**Your Node Number**

**Step 2. C (value)**

**Step 2. B (value)**

**Step 2. A (value)**